


UAT60S SERIES OIL-PULSE WRENCHES

EXPLODED VIEW

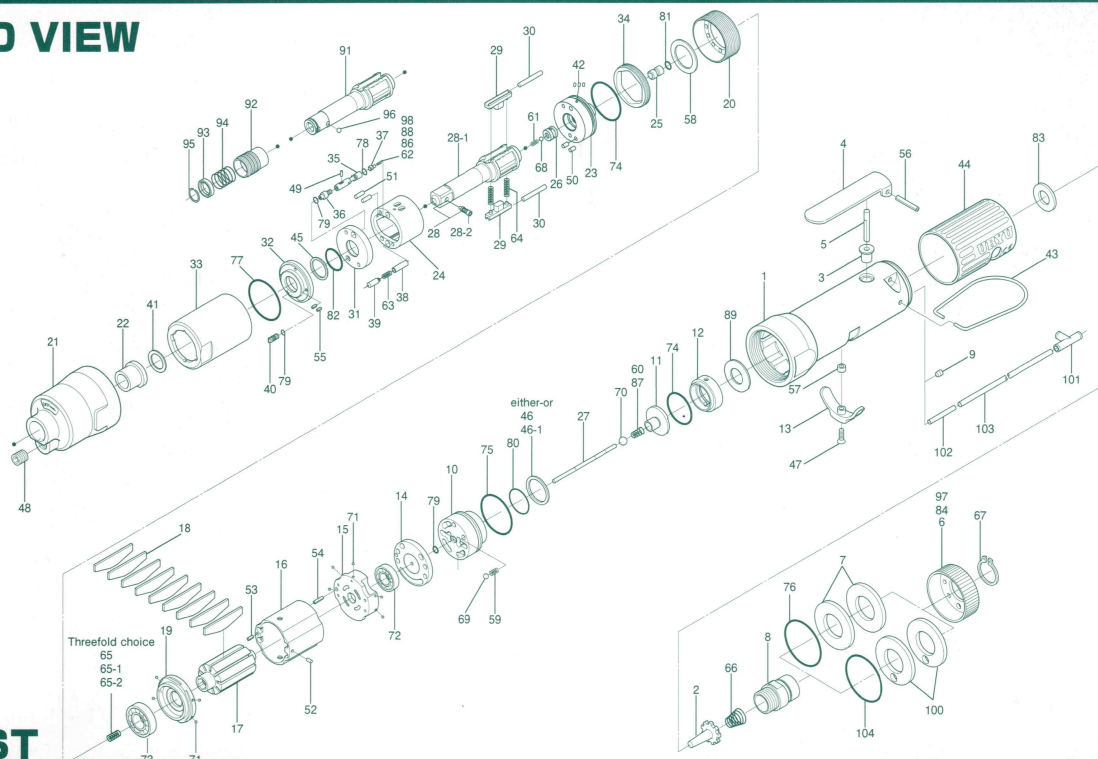

PARTS LIST

Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity	Index No.	Code No.	Parts Name	Quantity
# 1	18D-025-8	Casing	1	#40	194-742-0	Oil Plug	1	#78	990-621-0	O-Ring (3.8×1.8×1.0)	1
# 2	259-100-0	Valve	1	#41	145-327-7	Anvil Front Spacer	1	#79	990-970-0	O-Ring (SNS-2)	3
# 3	161-103-3	Valve Rod Bushing	1	#42	150-064-5	Plug	3	#80	990-914-0	O-Ring (SNS-16)	1
# 4	18D-107-8	Valve Lever	1	#43	191-790-1	Suspension Ring	1	#81	990-305-0	O-Ring (ARP568-003)	1
# 5	128-104-8	Valve Rod	1	#44	129-842-4	Casing Cover	1	#82	992-020-0	SU-Ring (Q12)	1
# 6	128-782-8	Exhaust Cover	1	#45	944-212-0	Back-up Ring (12×16×1.5)	1	#83	996-424-0	Urethane Packing (16×9×2)	1
# 7	128-835-8	Filter (K200)	2	#46	944-216-0	Back-up Ring (14×20×1.85)	1	#89	975-806-0	Adjusting Spacer 24×20×t	1
# 8	128-091-8	Air Inlet Bushing	1	#46-1	944-218-0	Back-up Ring (14×20×1.9)	1	PARTS FOR UAT60SL			
# 9	147-064-6	Filler	1	#47	948-426-0	Allen Head Dog Point Screw (M3×12)	1	#84	129-782-0	Exhaust Deflector	1
#10	129-253-2	Shut-off Valve Bushing	1	#48	966-099-0	Allen Head Plug (NPT1/16)	1	#86	976-882-0	Spring (2.7×7.5)	1
#11	145-254-6	Shut-off Valve	1	#49	970-013-0	Pin (H)(1.5×4)	1	#87	976-687-0	Spring (4.3×10)	1
#12	129-684-2	Cushion Spacer	1	#50	970-130-0	Pin (H)(2.45×4.5)	2	PARTS FOR UAT60SD			
#13	161-212-3	Reverse Lever	1	#51	970-131-0	Pin (H)(2.45×9.5)	2	#88	976-631-0	Spring (2.8×7.5) (0.45)	1
#14	128-291-8	Rear Plate Spacer	1	#52	971-102-0	Pin (2×3.8)	1	#91	145-350-7	Driver Anvil	1
#15	129-285-2	Rear Plate	1	#53	973-008-0	Roll Pin (2×8)	1	#92	011-351-1	Bit Sleeve	1
#16	129-286-2	Cylinder	1	#54	973-018-0	Roll Pin (2×18)	1	#93	011-352-1	Bit Spacer	1
#17	145-287-6	Rotor	1	#55	973-040-0	Roll Pin (1.5×5)	2	#94	976-327-0	Spring (13.5×11)	1
#18	147-288-2	Blade (PC)	9	#56	973-122-0	Roll Pin (3×22)	1	#95	978-117-0	Snap Ring (11.7×1)	1
#19	128-289-8	Front Plate	1	#57	975-004-0	Spacer (5.5×3.1×2.7)	1	#96	981-002-0	Ball (1/8)	1
#20	147-036-2	Hammer Casing Connector	1	#58	975-752-0	Adjusting Spacer (15×10×t)	1	PARTS FOR UAT60SDL			
#21	145-439-7	Front Casing	1	#59	976-006-0	Spring (3×5)	1	#97	129-782-0	Exhaust Deflector	1
#22	190-328-6	Anvil Bushing	1	#60	977-045-0	Cone Spring (4×4.6×9)	1	#98	976-883-0	Spring (2.7×7.6)	1
#23	18C-901-9	Rear Liner Plate	1	#61	976-653-0	Spring (2.4×5) (0.26)	1	PARTS FOR UAT60S series (TM) TYPE			
#24	10E-902-1	Liner	1	#62	976-636-0	Spring (2.8×7.4) (0.45)	1	Remove #9 147-064-6 Filler			
#25	145-546-6	Piston	1	#63	976-999-0	Spring (3×12) (0.4)	1	#100	851-053-1	Filter (K200)	1
#26	145-929-6	Check Valve Cover	1	#64	976-792-0	Spring (3.5×21) WPC	2	#101	909-442-0	Quick Exhaust (AQ240F-04-00)	1
#27	129-130-2	Operating Rod (2.1×64.7)	1	#65	976-650-0	Spring (3.3×16) Standard	1	#102	935-240-0	Nylon Tube (18NY)	1
#28	891-552-1	Anvil Assembly (P)	1	#65-1	976-662-0	Spring (3.3×18) Strong	1	#103	935-350-0	Polyurethane Hose (F-1504)	1
#28-1	145-319-6	Anvil	1	#65-2	976-857-0	Spring (3.3×17.5) Medium	1	#104	990-333-0	O-Ring (JW1530-23)	1
#28-2	891-300-1	Socket Pin Assembly	1	#66	977-227-0	Cone Spring (9×12×25)	1	ACCESSORIES			
#29	145-440-6	Driving Blade	2	#67	979-358-0	Snap Ring (ISTW-17)	1	#110	939-091-0	Allen Wrench (1.5)	1
#30	145-974-6	Roller (2.5×26)	2	#68	981-001-0	Ball (3/32)	1	#111	939-105-0	Allen Wrench (4)	1
#31	18C-973-8	Liner Casing Setter	1	#69	981-002-0	Ball (1/8)	1	#112	940-114-0	Air Hose Nipple (NPT1/4×3/8)	1
#32	145-904-6	Front Liner Plate	1	#70	981-003-0	Ball (5/32)	1	#113	916-810-0	(W) Bit No.2×75 for Driver Anvil	1
#33	145-905-6	Liner Casing	1	#71	981-045-0	Ball (1.5)	9	#114	909-449-0	Speed Controller	1
#34	145-906-6	Liner Casing Cover	1	#72	982-014-0	Ball Bearing (607)	1				
#35	145-907-6	Relief Valve Spindle	1	#73	982-902-0	Ball Bearing (6901)	1				
#36	094-970-4	Relief Valve	1	#74	990-329-0	O-Ring (JW1530-19)	2				
#37	144-270-0	Pressure Valve	1	#75	990-331-0	O-Ring (JW1530-21)	1				
#38	080-274-6	Pressure Valve Spring Collar	1	#76	990-603-0	O-Ring (28.5×1.3)	1				
#39	18E-276-3	Pressure Valve Body	1	#77	990-605-0	O-Ring (25×1.45)	1				

When ordering spare parts, please specify tool type, code number and parts name.

Printed in Japan



URYU SEISAKU, LTD. Osaka, Japan

For further information, please contact at any time your nearest URYU distributor.

OKA-541-18-08-07-1002